


horizontal sheerline distance from center between cabin bulkheads

Join fore and aft centers of cabin bulkheads with stiff profile, and adjust distances to sheerline. See manual for details.

NOTE: these are NOT half widths, as the direct line between the centers of the bulkheads is HIGHER than the sheerline

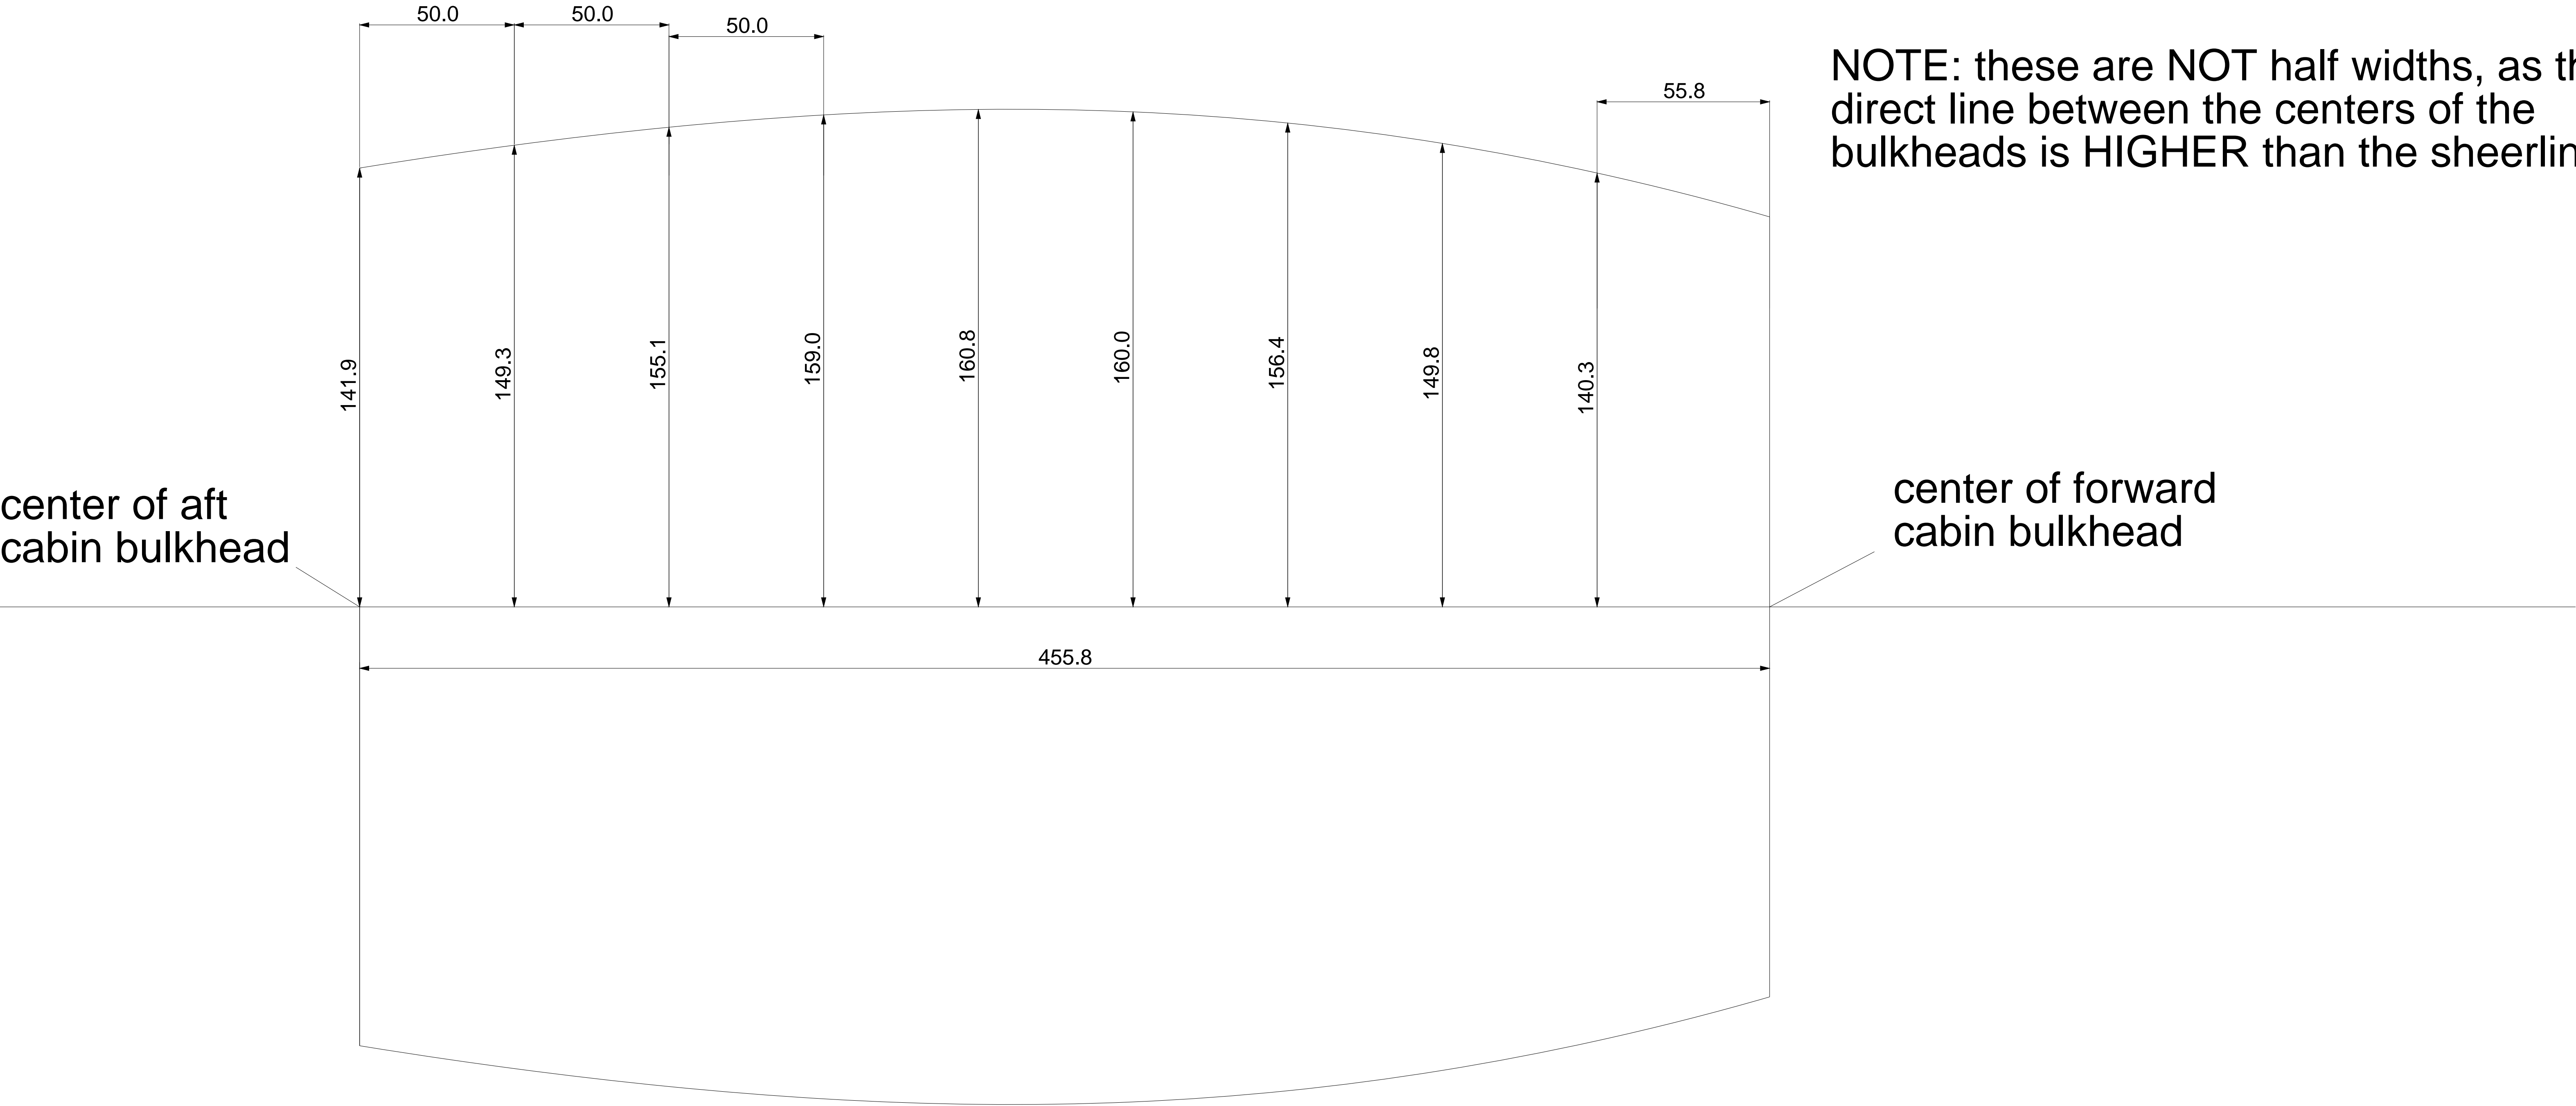

Sheerline adjustment
Scale 1:10